



Spare Parts


Basic Top



SP70843-GB1 2002-11

BasicTop

2

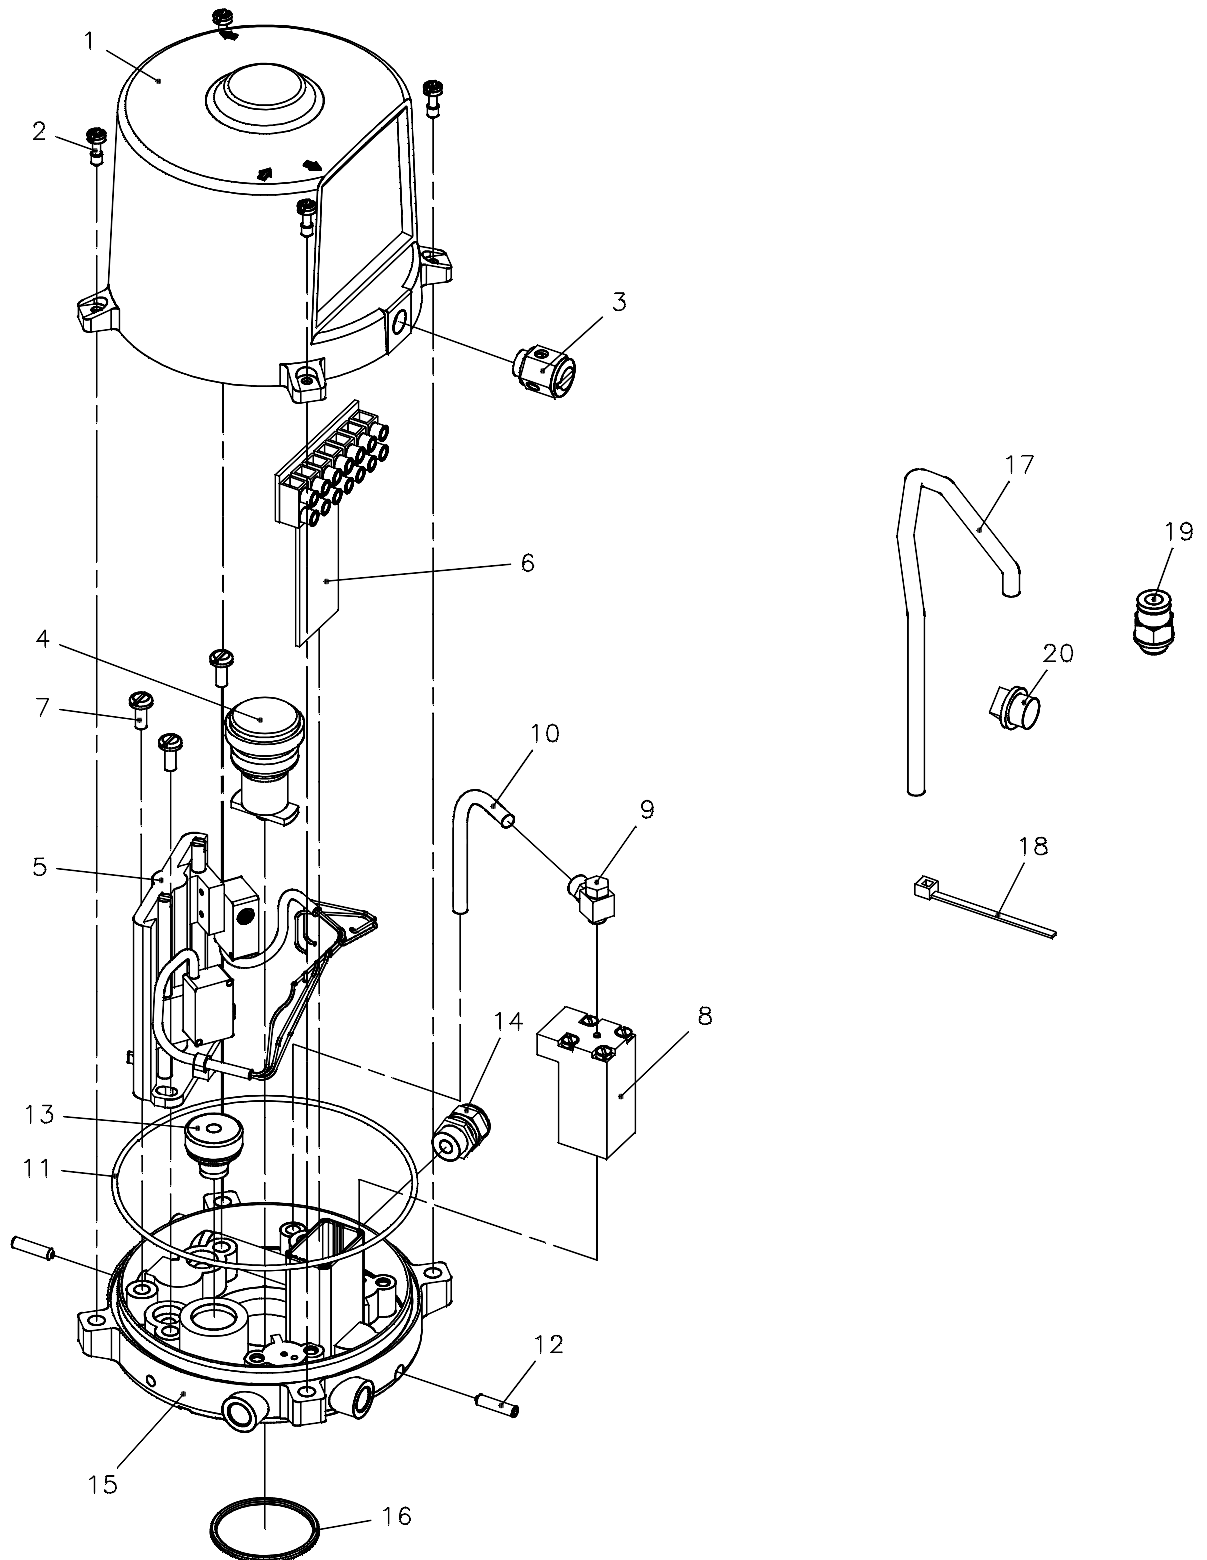

Pos.	Qty.	Denomination	SRC, ARC, LKB (LKLA-T), SRC-LS (only 38/51mm/DN 40/50)
1	1	House	9612-6493-01
		Pos. no. 2 and 3 are included	
2	4	Screw	9612-6020-01
3	1	Safety valve	9611-99-2928
4	1	Indicator pin	9612-4117-01
5	1	Frame cpl. with PNP sensor	9612-6492-01
	1	Frame cpl. with NPN sensor	9612-6492-02
6	1	PC board with screw terminals	9611-99-3118
7	3	Screw	9611-99-0337
8	1	Solenoid valve	9611-99-2809
9	1	Banjo connection	9611-99-3833
10	1	Air hose	9611-99-1409
11	1	O-ring	9611-99-2704
12	2	Pointed screw	9611-99-1756
13	1	Lead in bush	9611-99-2121
14	1	Cablegland	9611-99-2525
15	1	Cast base prepared for none solenoid valve	9612-9042-01
		(Pos. no 14 is included)	
	1	Cast base prepared for 1 solenoid valve	9612-9042-02
		(Pos. no 14 is included)	
	1	Cast base prepared for 2 solenoid valves	9612-9042-03
		(Pos. no 14 is included)	
16	1	Quadrang	9612-5696-01
17	1	Air hose	9611-99-2133
18	1	Cable bearer	9611-99-2134
19	1	Air fitting	9611-99-2323
20	1	Thread plug	9611-99-1221

How to contact Alfa Laval

Contact details for all countries are continually updated on our website. Please visit www.alfalaval.com to access the information direct.