


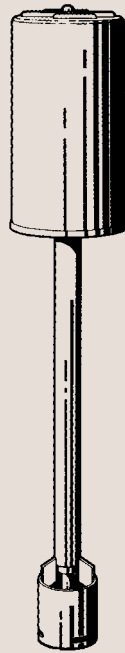


## Spare Parts

LKRE Agitator



# Agitator Type LKRE

2

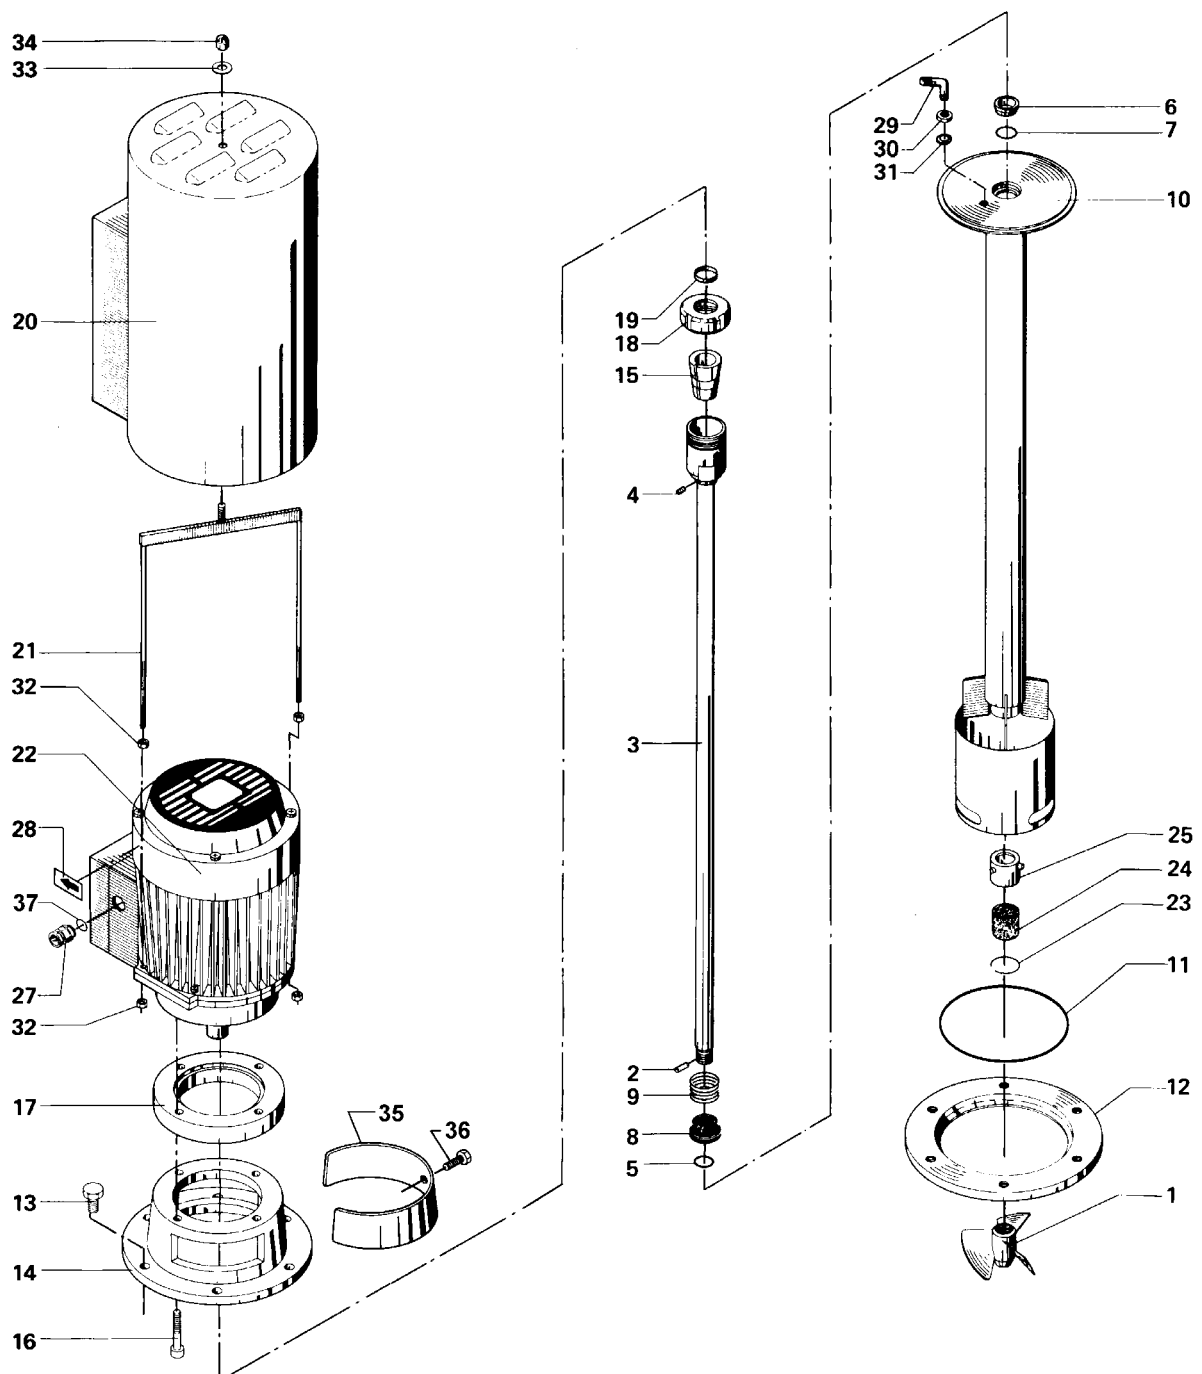

# Agitator Type LKRE

Pos.	Qty.	Denomination	Motor KW	60-0060	60-0061
			Propellerdiam.	1,5/2,2	1,5/2,2
		RPM	90	110	
			1500/3000	1500/3000	
1	1	Propeller .....	9611-60-2026	9611-60-2061	
2	1	Pin (Nylon 4 x 20) .....	9611-99-0626	9611-99-0629	
3	1	Shaft .....	9611-60-2029	9611-60-2053	
4	1	Screw .....	9611-99-0323	9611-99-0323	
5Δ	1	O-ring .....	223406-46	223406-46	
6	1	Stationary seal ring .....	9611-60-2033	9611-60-2033	
7Δ	1	O-ring (NBR) .....	9611-99-0087	9611-99-0087	
8Δ	1	Rotating seal ring .....	31439-0038-1	31439-0038-1	
9Δ	1	Spring .....	31439-0042-1	31439-0042-1	
10	1	Front plate .....	9611-60-2034	9611-60-2056	
11Δ	1	O-ring (NBR) .....	9611-99-0068	9611-99-0068	
12	1	Welding flange .....	9611-60-2042	9611-60-2042	
13	6	Set screw .....	9611-99-0365	9611-99-0365	
14	1	Motor console .....	9611-60-2080	9611-60-2080	
15	1	Wedge ring .....	9611-60-2044	9611-60-2044	
16	4	Allen screw .....	9611-99-0322	9611-99-0322	
17	1	Intermediate ring 9611-60-2045 .....	9611-60-2045		
18	1	Nut .....	9611-60-2046	9611-60-2046	
19	1	Distance ring .....	9611-60-2047	9611-60-2047	
20	1	Cover .....	9611-60-2048	9611-60-2048	
21	1	Cover fixing ring .....	9611-60-2050	9611-60-2050	
22	1	Motor .....	9611-99-0911	9611-99-0911	
23Δ	1	Steelring .....		9611-60-2063	
24Δ	1	Bush .....		9611-60-2064	
25	1	Support bearing .....		9611-60-2065	
27	1	Cable gland .....	31801-0154-4	31801-0154-4	
28	1	Direction arrow .....	9611-99-2519	9611-99-2519	
29	1	Connection .....	9611-60-2041	9611-60-2041	
30	1	Nut .....	9611-99-0350	9611-99-0350	
31	1	Seal .....	9611-99-0197	9611-99-0197	
32	4	Nut .....	9611-99-0309	9611-99-0309	
33	1	Washer .....	9611-99-0733	9611-99-0733	
34	1	Nut .....	9611-99-1696	9611-99-1696	
35	1	Guard for motor console .....	9611-60-3350	9611-60-3350	
36	1	Screw .....	9611-99-1373	9611-99-1373	
37	1	O-ring .....	9611-99-0972	9611-99-0972	
	Δ	<b>Service kit.....</b>	<b>9611-92-5012</b>	<b>9611-92-5013</b>	

Parts marked with Δ are included in the **Service kit**.

How to contact Alfa Laval  
Contact details for all countries are  
continually updated on our website.  
Please visit [www.alfalaval.com](http://www.alfalaval.com) to  
access the information direct.