


Spare Parts

Alfa Laval SB Self-cleaning CO2 valve

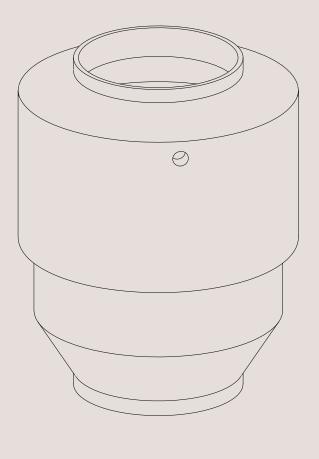


ESE02905-EN1

2015-04

Original manual

Table of contents

The information herein is correct at the time of issue but may be subject to change without prior notice	

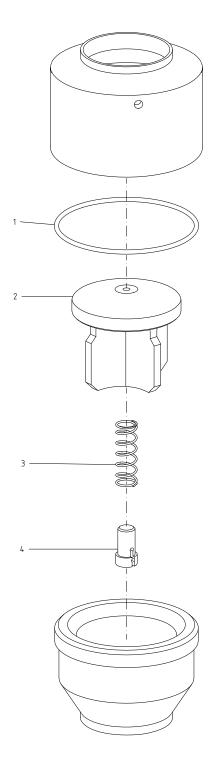

Pos	Qty Denomination	25mm DN25	38mm DN40	51mm DN50	63.5mm DN65	76.1mm DN80	101.6mm DN100
	1 0 1	0011005000	0011005000	0011005001	0011005005	0011005001	0044005007
1	1 O-ring	9611995622	9611995623	9611995624	9611995625	9611995634	9611995627
2	1 Valve disc	9615108101	9615108701	9615108801	9615108901	9615107701	9615109001
3	1 Spring	9615107601	9615115301	9615115301	9615109301	9615109301	9615109301
4	1 Spring guide		9615107501	9615107501	9615109201	9615109201	9615109201

This document and its contents is owned by Alfa Laval Corporate AB and protected by laws governing intellectual property and thereto related rights. It is the responsibility of the user of this document to comply with all applicable intellectual property laws. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the expressed permission of Alfa Laval Corporate AB. Alfa Laval Corporate AB.

How to contact Alfa Laval Contact details for all countries are continually updated on our website.

© Alfa Laval Corporate AB

Please visit www.alfalaval.com to access the information directly.

will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.