Instruction Manual

SSB Retractor Stroke 60/120 Media-to-Spring

Covering
- Standard machines, ISO tank connection
- Hastelloy machines
- Machines delivered with ATEX Certification in accordance with Directive 94/9/EC valid until 2016-04-19/Directive 2014/34/EU valid from 2016-04-20

IM-TE91A902-EN4
ESE03059EN
Date of issue: November 12, 2015
First published: January 6, 2012

Original manual

Contents

Introduction ... 3
Intended Use ... 4
Patents and trademarks ... 4
ATEX Marking ... 5
Design Overview ... 5
Applications ... 6
Options ... 6
SSB Retractor Unit in extended position ... 7
Accessories ... 8
Proximity Sensor, data sheet ... 10
- Article no. TE75P507 ... 10
- Article no. TE75P596-70 ... 11

Technical Data ... 12
- Standard machines, stainless steel ... 12
- Standard machines, Hastelloy ... 13

Connections ... 13
- Available add-ons ... 14

Flow Rate Data ... 15
Installation dimensions and connections ... 16
- Dimensions for SSB Retractor 60 Media-Spring ... 16
- Dimensions for SSB Retractor 120 Media-Spring ... 17

Installation ... 19
- General Safety and Installation Instructions ... 20
- Special Conditions for Safe Use in accordance with the ATEX Certification ... 21

Warnings ... 25
- Fluid connections ... 25
- Important recommendation for installation ... 25

Service and Repair of ATEX Certified Machines ... 26
Recommended Service Intervals ... 27
Parts Lists and Drawings ... 28
- List of parts for SSB Retractor 60 Media-Spring ... 29
- List of parts for SSB Retractor 60 Media-Spring, Hastelloy ... 30
- Parts drawing for SSB Retractor 120 Media-Spring ... 32
- List of parts for SSB Retractor 120 Media-Spring ... 33
- List of parts for SSB Retractor 120 Media-Spring, Hastelloy ... 34

Maintenance ... 35
- Dismantling the Unit for Inspection ... 35

Re-Build & fitment of New Service Repair Kit ... 43
Standard Service Kits ... 51
General Information ... 53

How to Order Spare Parts 53
Service and Repair 53
How to contact Alfa Laval Tank Equipment 53
EC/EU Declaration of Conformity 54
ATEX-Special Conditions for safe use 55

Introduction

The SSB Retractor is a cleaning media operated targeted spray ball which has been designed to achieve fast effective cleaning of all equipment used in the production process, including Ductwork, Vent Lines, Cyclones and many other applications where access is impossible

This manual has been prepared as a guide for the persons who will be operating and maintaining your tank cleaning machine. The key to long life for your tank cleaning machine will always be a system of carefully planned maintenance; you will appreciate that a tank cleaning machine which has a rough and dirty job to do will need more frequent attention than one working in ideal conditions.

It is in your own interest to get the best and most economical performance from your tank cleaning machine. Neglect of maintenance means poor performance, unscheduled stoppages, shorter life and expense. Good maintenance means good performance; no unscheduled stoppages and better total economy.

You will find the information contained in this manual simple to follow, but should you require further assistance, our Customer Service Department and world-wide net of Distributors will be pleased to help you. Please quote the type and serial number with all your enquiries; this will help us to help you.

The serial number is placed on the side of the body of the tank cleaning machine.

Note: The illustrations and specifications contained in this manual were effective at the date of printing. However, as continuous improvements are our policy, we reserve the right to alter or modify any unit specification on any product without prior notice or any obligation.

© Alfa Laval Corporate AB
This document and its contents is owned by Alfa Laval Corporate AB and protected by laws governing intellectual property and thereto related rights. It is the responsibility of the user of this document to comply with all applicable intellectual property laws. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the expressed permission of Alfa Laval Corporate AB. Alfa Laval Corporate AB will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.

Intended Use

It is to be verified by the end-user:

- that the tank cleaning machine is in conformity with respect to tank, vessel, container or duct size in which it will be used.
- that the construction materials (both metallic and non-metallic) are compatibility with product, flushing media, cleaning media, temperatures and pressure under the intended use.

Patents and trademarks

This Instruction Manual is published by Alfa Laval Kolding A/S without any warranty. Improvements and changes to this Instruction Manual may at any time be made by Alfa Laval Kolding A/S without prior notice. Such changes will, however, be incorporated in new editions of this Instruction Manual.

© Alfa Laval Kolding A/S. All rights reserved.

The Alfa Laval logotype is a trademark or a registered trademark of Alfa Laval Corporate AB. "Toftejorg" is a trademark or registered trademark of Alfa Laval Kolding A/S. Other products or company names mentioned herein may be the trademarks of their respective owners. Any rights not expressly granted herein are reserved

If ordered with ATEX certificate:
ATEX Marking

The SSB Retractor 60/120 Media-to-Spring is certified as category I components. The certification is carried out by the certified body Baseefa, who has issued the certificate Baseefa 06ATEX0292X. The marking on the ATEX certified SSB Retractor 60/120 Media-to-Spring is as follows:

Note:

TE75P030-04, TE75P031-04, TE75P050-04, TE75P051-04, 75Q030-04, TE75Q031-04, TE75Q050-04 & TE75Q051-04
These machines are approved for 180°C max: Tamb -10°C to +180°C.

Changes to the machine are not allowed without approval by the person responsible for the ATEX certification at Alfa Laval Tank Equipment. If changes are made – or spare parts other than Alfa Laval original spare parts are used - the EC Type Examination certification (the ATEX Directive) is no longer valid.

Important ATEX information:

Also see page 21 regarding special conditions for repair of ATEX certified machines.

Design Overview

The unit has been designed to extend the sprayball into the duct or vessel when the CIP cleaning media is applied. After the CIP cycle & the cleaning media pressure is removed the sprayball will be pulled back into the Home Chamber by the internal spring. Once the Sprayball is in the closed position the sprayball cap will seal with the Home Chamber to ensure the sprayball is isolated from the duct or vessel.

Applications

The SSB Retractor can be used to clean from simple tanks and ductwork, to complex process applications with agitators where it is not possible to use fixed spray balls. Applications such as Storage Tanks, Reactors, Mixers and Spray Dryers including Ductwork and Vent Lines can all be cleaned by use of one or multiple SSB Retractor units.

ATEX Warning:	The speed at which the Sprayball is deployed (extended to the open position) must not exceed 0.5m/s. Ensure that the cleaning media pressure does not exceed to 4 bar max.

Options

The units are available in a range of operating strokes. As standard there are two sizes of SSB Retractor—60mm and 120mm. However, both units can be adjusted during manufacture by increments of 10mm. This allows the units to be fine tuned to accurately position the spray ball optimising the effectiveness.

As standard the units are available with all machined components in 316L Stainless Steel and standard seals in EPDM and Carbon filled PTFE. However, the units are available with product wetted components in Hastelloy C22 and seals manufactured from FFKM (Perfluorolastomer) should the environment require.

The spray balls are offered with standard spray patterns or can be target drilled to direct cleaning to certain features such as access covers etc.

SSB Retractor Unit in extended position

Figure 1 SSB, extended position

Accessories

Proximity sensors can be used to indicate if the SSB Retractor unit is either fully open, fully closed or both.

Alfa Laval offers supply of proximity sensors for subsequent assembly.

ATEX Warning:	If Proximity sensors are fitted the SSB Retractor, the assembler or the end user is fully responsible for the assembly and the associated risk assessment and ATEX approval.

If this option is required, two sensors will be required for each position.

Standard sensor	:	TE75P507
ATEX sensor	:	TE75P596-70

If the SSB Retractor is being ordered with ATEX Certification it is important to note that if a sensor is fitted the ATEX Category & Zone in which the SSB Retractor can be used will be effected.

The SSB Retractor is ATEX Category 1 but if sensors are fitted the unit will assume the lower ATEX rating of the Proximity Sensor.

If sensors are required for an ATEX environment please consult Alfa Laval.

ATEX Warning:	It is important to note that the SSB Retractor is ATEX Category 1 for installations in zone 0/20. However, if Proximity sensors are fitted, the overall ATEX rating of the SSB Retractor will assume the lower ATEX rating of the proximity sensor.

ATEX Warning:	It is important to note that if the SSB Retractor is fitted with ATEX sensor, it is necessary to validate it with the installation.

- Intentionally blank -

Proximity Sensor, data sheet

Article no. TE75P507

Proximity Sensor

Electric, with reed contact, for drives with T-slot, with cable, without LED, heat resistant design.

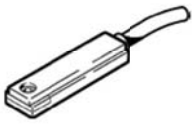

Data sheet

Feature	values
Design	for T-slot
Conforms to standard	EN 60947-5-2
Materials note	Free of copper and PTFE Conforms to RoHS
Measuring principle	Reed magnetic
Ambient temperature	-40 ... 120 °C
Switch output	with contact, bipolar
Switching element function	Normally open contact
Reproducibility of switching value	+/- 0,1 mm
Switch-on time	<= 0,5 ms
Switch-off time	<= 0,03 ms
Max. switching frequency	800 Hz
Max. output current	500 mA
Max. contact rating AC	10 VA
Max. contact rating DC	10 W
Voltage drop	<= 0 V
Short circuit strength	No
Overload withstand capability	Not available
Operating voltage range AC	0 ... 30 V
Operating voltage range DC	0 ... 30 V
Polarity protected	No
Electrical connection	Cable 2-core
Connector exit direction	axial
Cable length	2,5 m
Materials information, cable sheaths	TPE-S
Mounting type	Clamped in T-slot Insertable into slot lengthwise
Tightening torque	0,2 Nm
Product weight	50 g
Materials information, housing	Epoxy resin PC PET High alloy steel, non-corrosive
Ambient temperature with flexible cable installation	-5 ... 120 °C
Protection class	IP67
Insulation voltage	50 V
Surge strength	0,8 kV
Degree of contamination	3

Proximity Sensor, data sheet

Article no. TE75P596-70

Proximity Sensor

Electric, contactless, NPN, two wire Namur design, for drives with T-slot, assembly from above, with cable.

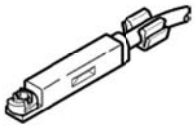



Data sheet

Feature	values
Design	for T-slot
Conforms to standard	EN 60947-5-6
Authorisation	C-Tick
CE mark (see declaration of conformity)	to EU directive for EMC to EU directive explosion protection (ATEX)
ATEX category Gas	II 1G
Explosion ignition protection type Gas	Ex ia IIC T4...T6
ATEX category Dust	II 1D
Explosion ignition protection type Dust	Ex iaD 20 IP67 T95°C
Explosion protection certification outside the EU	GOST-R EPL Ga
Explosion-proof ambient temperature	-10°C <= Ta <= +70°C
Certificate issuing department	KEMA 04 ATEX 1114 X
Materials note	Free of copper and PTFE
Measuring principle	Magnetic inductive
Ambient temperature	-25 ... 70 °C
Switch output	NAMUR
Switching element function	NAMUR
Reproducibility of switching value	+/- 0,1 mm
Switch-on time	<= 0,5 ms
Switch-off time	<= 0,5 ms
Max. output current in Namur operating mode	4,5 mA
Residual current	< 0,7 mA
Short circuit strength	for all electrical connections
Nominal operating voltage DC	8,2 V
Polarity protected	for all electrical connections
Electrical connection	Cable 2-core
Cable length	5 m
Materials information, cable sheaths	PVC
Mounting type	Clamped in T-slot
Assembly position	Any
Product weight	70 g
Materials information, housing	PA
Operating status display	Yellow LED
Ambient temperature with flexible cable installation	-5 ... 70 °C
Protection class	IP65 IP67

Technical Data

Standard machines, stainless steel

Toftejorg SSB Retractor Media-Spring Stroke 60

Model /Article No.	TE75P030 TE75P050	TE75P030-04 TE75P050-04

Weight of Unit	:	2.0kg	2.0kg
Cleaning Fluid Pressure	:	2 - 4 bar (29 - 58 psi)	2 - 4 bar (29 - 58 psi)
Flow Rate Approx.	:	2.8m³ / hr at 3 bar	2.8m³ / hr at 3 bar
Max. Cleaning Fluid temp.	:	95° C (203 deg F)	95° C (203 deg F)
Max. Process temp.	:	140° C (284 deg F)	180° C (356 deg F)
Ambient temp.	:	-10°C to +140°C (95° C – 140°C - when **not** operated)	-10°C to +180°C (95° C – 180°C - when **not** operated)

Toftejorg SSB Retractor Media-Spring Stroke 120

Model /Article No.	TE75P031 TE75P051	TE75P031-04 TE75P051-04

Weight of Unit	:	3.6kg	3.6kg
Cleaning Fluid Pressure	:	2 - 4 bar (29 - 58 psi)	2 - 4 bar (29 - 58 psi)
Flow Rate Approx.	:	2.8m³ / hr at 3 bar	2.8m³ / hr at 3 bar
Max. Cleaning Fluid temp.	:	95° C (203 deg F)	95° C (203 deg F)
Max. Process temp.	:	140° C (284 deg F)	180° C (356 deg F)
Ambient temp.	:	-10°C to +140°C (95° C – 140°C - when **not** operated)	-10°C to +180°C (95° C – 180°C - when **not** operated)

Technical Data (continued)

Standard machines, Hastelloy

Model /Article No.	Stroke 60 TE75Q030-04 TE75Q050-04	Stroke 120 TE75Q031-04 TE75Q051-04
Weight of Unit :	2.0kg	3.6kg
Cleaning Fluid Pressure :	2 - 4 bar (29 - 58 psi)	2 - 4 bar (29 - 58 psi)
Flow Rate Approx. :	2.8m³ / hr at 3 bar	2.8m³ / hr at 3 bar
Max. Cleaning Fluid temp. :	95° C (203 deg F)	95° C (203 deg F)
Max. Process temp. :	180° C (356 deg F)	180° C (356 deg F)
Ambient temp. :	-10°C to +180°C (95° C – 180°C - when **not** operated)	-10°C to +180°C (95° C – 180°C - when **not** operated)

Materials

Components	:	Stainless Steel 316L, Hastelloy C22	Stainless Steel 316L, Hastelloy C22
Spring	:	Stainless Steel 301S81	Stainless Steel 301S81
Seals	:	EPDM, Carbon Filled PTFE	FFKM-(Perfluorolastomer), Carbon Filled PTFE
Gaskets	:	PTFE	PTFE

Connections

Cleaning Media Connection	:	1" ISO Flange
Vessel Mounting	:	2" ISO Flange
Body Tube Joints	:	Flanged/Clamped to DIN 40 (DIN 32676)

Technical Data (continued)

Available add-ons

Available add-ons (documentation) for SSB Retractor 60 Media-Spring: TE75P030, TE75P030-04, TE75P050 & TE75P050-04

TE75P0X0-70	EPDM + ATEX
TE75P0X0-80	EPDM + ATEX + 3.1 cert.
TE75P0X0-90	EPDM + 3.1 cert.
TE75P0X0-74	FFKM + ATEX
TE75P0X0-84	FFKM + ATEX + 3.1 cert.
TE75P0X0-94	FFKM + 3.1 cert.

Available add-ons (documentation) for SSB Retractor 120 Media-Spring: TE75P031, TE75P031-04, TE75P051 & TE75P051-04

TE75P0X1-70	EPDM + ATEX
TE75P0X1-80	EPDM + ATEX + 3.1 cert.
TE75P0X1-90	EPDM + 3.1 cert.
TE75P0X1-74	FFKM + ATEX
TE75P0X1-84	FFKM + ATEX + 3.1 cert.
TE75P0X1-94	FFKM + 3.1 cert.

Available add-ons (documentation) for Hastelloy SSB Retractor 60 Media-Spring: TE75Q030-04 & TE75Q050-04

TE75Q0X0-04	FFKM
TE75Q0X0-74	FFKM + ATEX
TE75Q0X0-84	FFKM + ATEX + 3.1 cert.
TE75Q0X0-94	FFKM + 3.1

Available add-ons (documentation) for Hastelloy SSB Retractor 120 Media-Spring: TE75Q031-04 & TE75Q051-04

TE75Q0X1-04	FFKM
TE75Q0X1-74	FFKM + ATEX
TE75Q0X1-84	FFKM + ATEX + 3.1 cert.
TE75Q0X1-94	FFKM + 3.1

Explanation to Add-on´s:

ATEX includes:
ATEX approved machine for use in explosive atmospheres. Category 1 for installation in zone 0/20 in accordance to Directive 94/9/EC valid until 2016-04-19/Directive 2014/34/EU valid from 2016-04-20. Ex II 1GD c TX°C Tamb -10°C to +140°C or Ex II 1GD c TX°C Tamb -10°C to +180°C.

Flow Rate Data

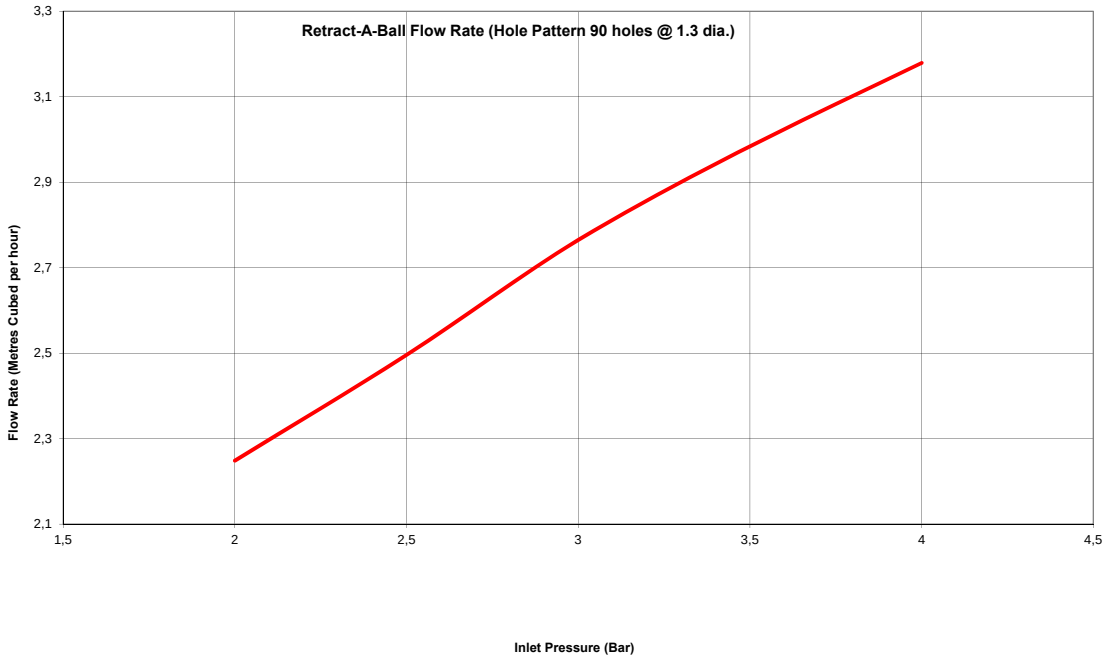

The above Flow Chart shows the typical flow rate through the SSB Retractor fitted with a standard spray ball with 90 holes at 1.3mm dia.

Flow Rates can be changed by different drilling patterns if required.

Installation dimensions and connections

Dimensions for SSB Retractor 60 Media-Spring

TE75P030, TE75P030-04, TE75P050, TE75P050-04, TE75Q030-04 & TE75Q050-04

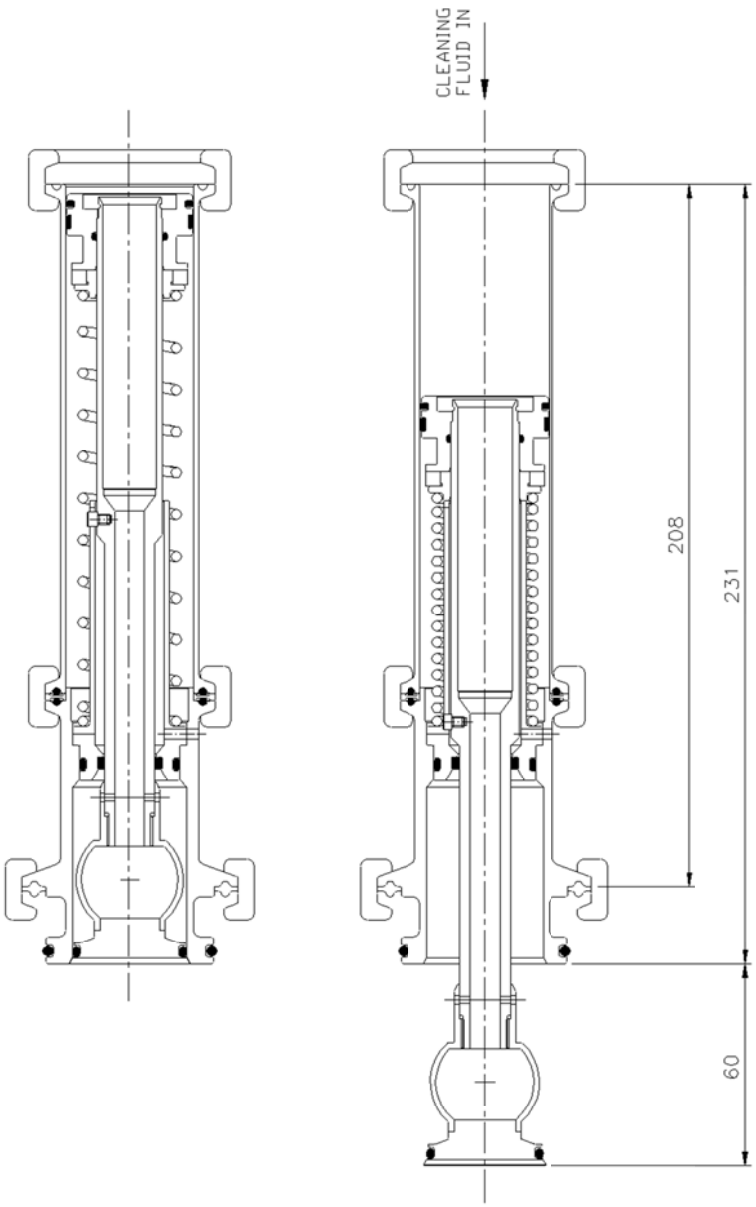

Figure 2 Dimensions SSB Retractor 60 Media-Spring

Installation dimensions and connections (continued)

Dimensions for SSB Retractor 120 Media-Spring

TE75P031, TE75P031-04, TE75P051, TE75P051-04, TE75Q031-04 & TE75Q051-04

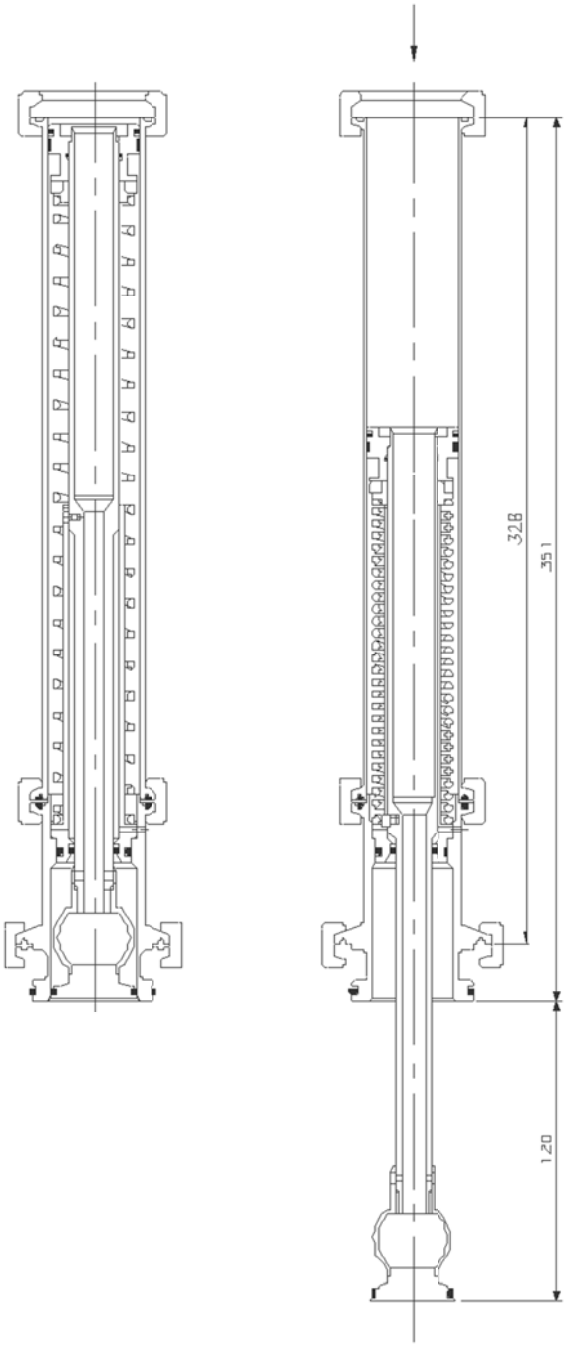

Figure 3 Dimensions SSB Retractor 120 Media-Spring

Installation dimensions and connections

NOTES:

1.MATERIALS:	MACHINED COMPONENTS: STAINLESS STEEL - GRADE 316L HASTELLOY C22
2. SEALS:	MACHINED CARBON FILLED PTFE, EPDM or FFKM O-RINGS
3. SPRING:	STAINLESS STEEL - GRADE 301S81 (NON-WETTED)
4. BODY JOINTS:	DIN 40 FLANGES. DESIGNED IN ACCORDANCE WITH DIN 32676. (SAFETY CLAMPS)
5. PRESSURES:	CLEANING LIQUID: 2-4 bar (29-58 psi)
6. TEMPERATURES:	CLEANING LIQUID: 95ºC (203ºf) MAX PROCESS:140ºC (284ºf)
7. LIQUID CONNECTION:	1" ISO FLANGE
8. BODY MOUNTING:	2" ISO FLANGE

Figure 4 Connections

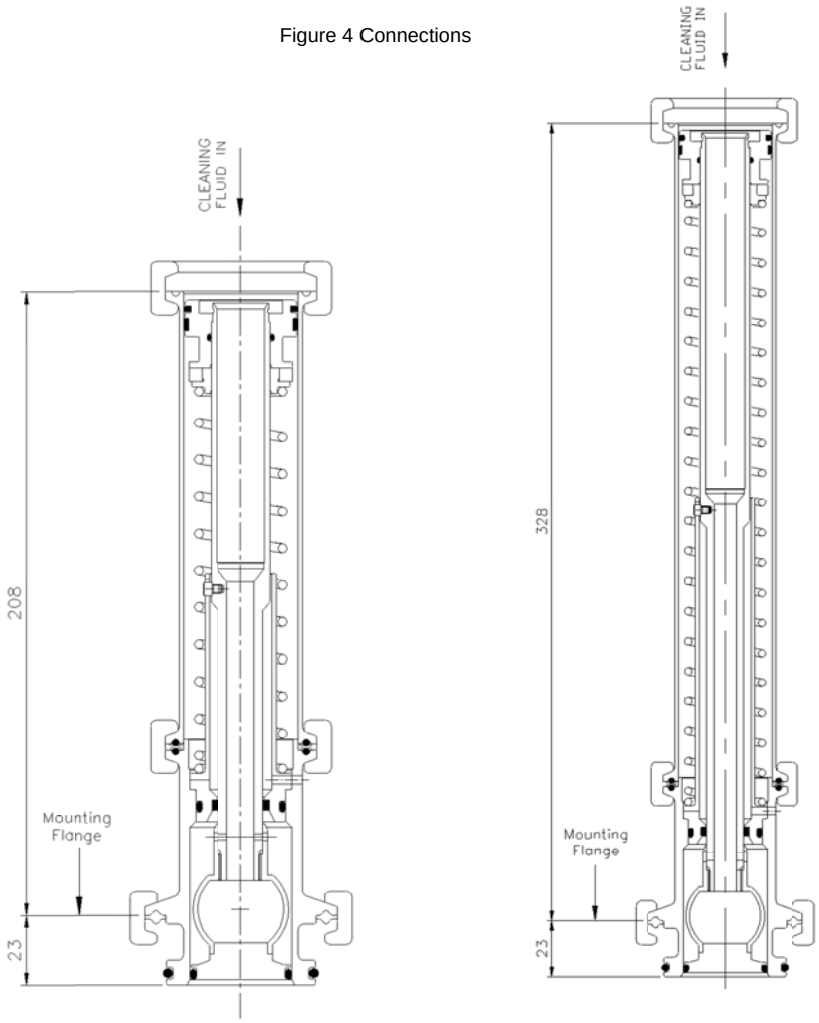

Installation

The SSB Retractor is mounted to a 2" ISO Ferrule using the 2" ISO gasket and clamp supplied. The unit must be mounted so that it is a minimum for 5° above horizontal. This is important to allow the Home Chamber to drain when cleaning has finished. See Figure 5.

Image Shows unit mounted to a vertical duct.

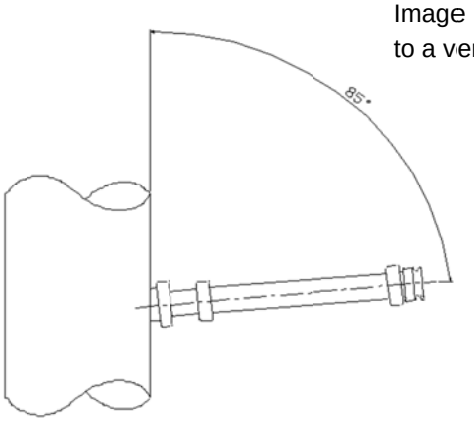

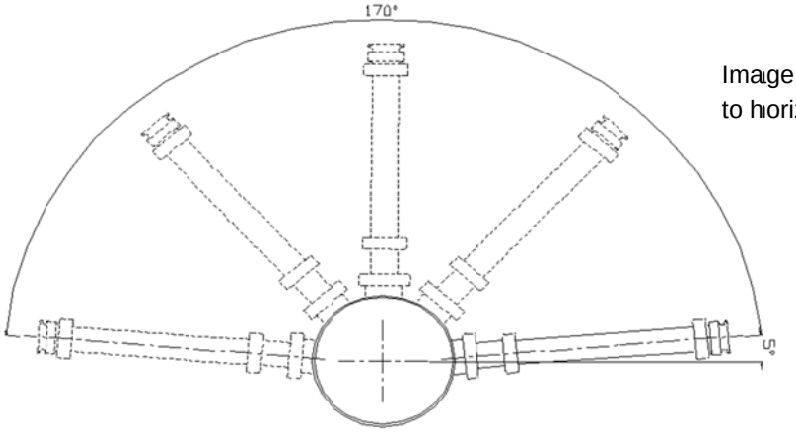

Image shows unit mounted to horizontal duct.

Figure 5 Installation

Installation (continued)

General Safety and Installation Instructions

Note: The machine shall be installed in accordance with national regulations for safety and other relevant regulations and standards.
Precautions shall be made to prevent starting of the cleaning operation, while personnel are inside the tank or otherwise can be hit by jets from the nozzles.
In EU-countries the complete system must fulfil the EU-Machine Directive and depending of application, the EU-Pressure Equipment Directive, the EU-ATEX Directive and other relevant Directives and shall be CE-marked before it is set into operation.

Warning:

If the machine is used in potential explosive atmospheres, tapes or joint sealing compounds which are electrical insulators must not be used on threads or joints, unless an electrical connection is otherwise established to ensure an effective earthing. In addition, connecting pipe work, must be electrically conductive and earthed to the tank structure. The resistance between the nozzles and the tank structure should not exceed 20,000 Ohm. This is essential to avoid the build-up of static electricity on the machine.

For further information see IEC/TS 60079-32-1:2013, guidance and recommendations for the avoidance of hazards due to static electricity.

Electrical equipment such as magnetic valves and electric actuators must not be installed in Ex-zones without type approval and marking, corresponding to the EX-class in question.

Installation (continued)

Special Conditions for Safe Use in accordance with the ATEX Certification

Directive 94/9/EC valid until 2016-04-19/Directive 2014/34/EU valid from 2016-04-20

ATEX Warning:	The unit shall be connected to a fully earthed pipeline/duct or tank/vessel.

ATEX Warning:	The air operated unit shall only be operated with inert gas or clean air.

ATEX Warning:	The unit shall only be purged with inert gas or clean air

Installation (continued)

Special Conditions for Safe Use in accordance with the ATEX Certification

Directive 94/9/EC valid until 2016-04-19/Directive 2014/34/EU valid from 2016-04-20

ATEX Warning:	Do not allow the unit to be operated when process media is in the pipeline or tank.

ATEX Warning:	Do not allow the air pressure to exceed 5.5 bar.

ATEX Warning:	Do not allow the cleaning media to exceed 4 bar.

ATEX Warning:	When an external sensor is fitted to indicate the open or closed position it shall be suitable for the zone in use.

ATEX Warning:	The pipeline/duct shall not exceed a diameter of 3m, and the tank/vessel shall not exceed 100m³.

In addition to the above mentioned precautions relating to the ATEX guidelines Directive 94/9/EC valid until 2016-04-19/Directive 2014/34/EU valid from 2016-04-20, the Safety Precautions on page 20 must be observed.

Installation (continued)

Special Conditions for Safe Use in accordance with the ATEX Certification

Directive 94/9/EC valid until 2016-04-19/Directive 2014/34/EU valid from 2016-04-20

Temperature

ATEX Warning:	Atmosphere/surface temperature: In potentially explosive atmospheres, the temperature must not exceed the maximum surface temperature according to the temperature class for the combustible gas or liquid.

ATEX Warning:	Steam cleaning: Tanks with capacities greater than 100 m^3 that could contain a flammable atmosphere should not be steam cleaned, as steam issuing from a nozzle could contain charged droplets. Tanks smaller than this may be steam cleaned providing that: the steam nozzles and other metal parts of the system are reliably earthed and grounded to the tank structure.

Pressure

Avoid hydraulic shocks. Increase pressure gradually. Do not exceed 4 bar inlet pressure. Recommended inlet pressure: 2-4 bar. High pressure in combination with high flow rate will increase consumption of wear parts. High pressure will also reduce the cleaning effect.

Installation (continued)

Orientation

As the Spray Ball on the SSB Retractor is often targeted it is important that the unit is installed in the correct orientation. The Spray balls are keyed to the Home Chamber. The Home Chamber has a roll pin fitted through its side. See Figure 6

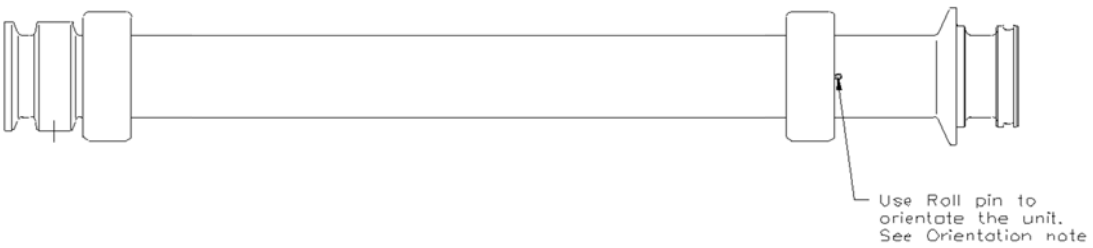

Figure 6 Installation orientation

Once the unit is mounted into the 2" ISO mounting ferrule it should be rotated so that the roll pin points parallel to the duct work to which it is mounted, before the mounting clamp is tightened. This will ensure the correct orientation for the Spray Ball.

In some instances the units may be specially drilled to target certain features or may not be mounted into ductwork. In these instances, the roll pin should again be used to orientate the unit but there will be an instruction enclosed with the unit to advise the direction the pin should point.

It is recommended that a filter with 0.5mm holes is fitted to the supply line.

Before connecting the Cleaning Media Pipe work to the unit it is recommended that the supply lines and valves should be flushed in order to remove any foreign particles.

Installation (continued)

Cleaning Media

The media must be compatible with Stainless Steel 316L, Hastelloy C22, EPDM or FFKM and carbon filled PTFE. Normal detergents, moderate solutions of acids and alkaline are acceptable.

After Use Cleaning

After use the units should always be flushed with fresh water. Cleaning media should never be allowed to dry inside the unit due to possible 'salting out' or scaling of the cleaning media.

Warnings

Warning:

The unit is operated by Cleaning Media. It is important that the Cleaning Media pressure is released and isolated before any work is carried out on the unit.

The clamps used on the body of the unit are safety clamps and **cannot** come away from the unit if the clamping nut is accidentally slackened, however great care must be taken.

Fluid connections

The unit is supplied with cleaning media (fluid) at pressure. Ensure that the supply is isolated before work starts on the unit.

Important recommendation for installation

It is recommended that the media connection to the SSB Retractor is always by means of a flexible, not fixed, coupling/pipe work. This is important to ensure that there is no undue force applied to the unit which can cause internal misalignment and therefore damage.

Service and Repair of ATEX Certified Machines

All service and repair of ATEX certified machines can be performed by Alfa Laval Tank Equipment, Kolding, Denmark or by an Alfa Laval service center approved by Alfa Laval Tank Equipment.

ATEX Warning:

In order to ensure compliance with the ATEX regulations and keep the machine ATEX certification valid the service or repair must be performed by an authorized person with knowledge of the ATEX requirements and regulations.
All spare parts must be original Alfa Laval spare parts and the repair or service must be done according to the instructions in the related manual.

If a customer wishes to carry out service or repair himself, it is the responsibility of the repair shop to ensure that the ATEX requirements are met in any way possible. After performing service or repair, the repair shop thus carries the full responsibility for traceability of all relevant documents in order to ensuring the retention of the ATEX certification of the machine.

Recommended Service Intervals

Inspection every 500 working hours. After 2000 working hours: inspection every 200 hours.

An Inspection consists of: See page 33.

Parts Lists and Drawings

Parts drawing for SSB Retractor 60 Media-Spring

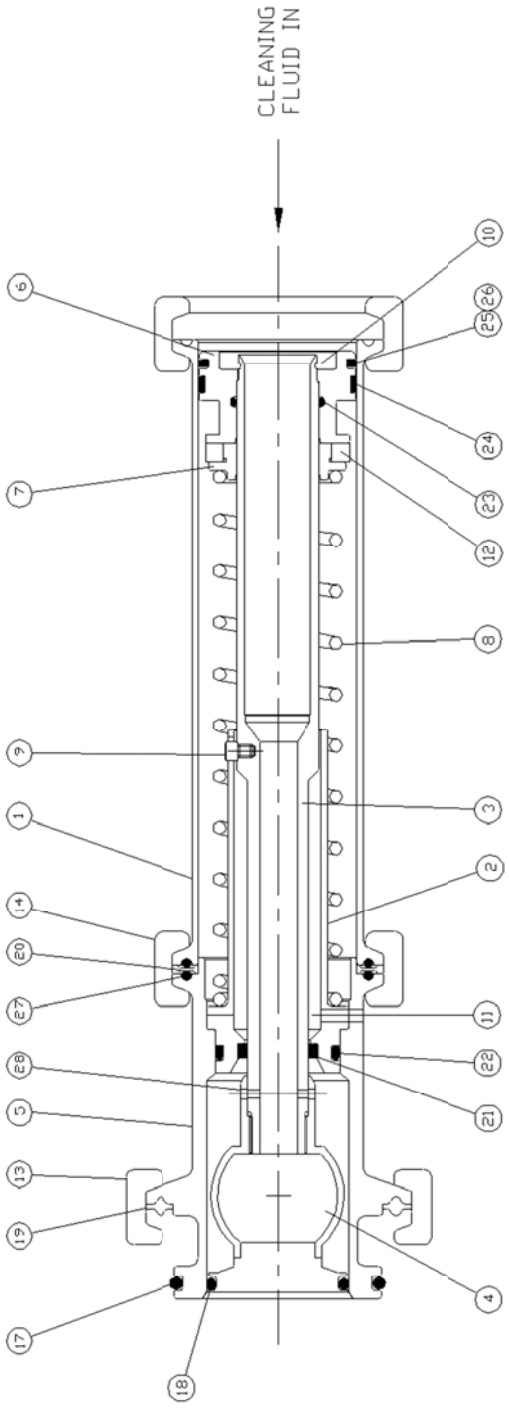

Figure 7 Component Parts SSB Retractor 60 Media-Spring

Parts Lists and Drawings (continued)

List of parts for SSB Retractor 60 Media-Spring

Model No.	TE75P030	TE75P030-04	TE75P050	TE75P050-04			
Pos.no.	Ref. No.	Ref. No.	Ref. No.	Ref. No.	Description	QTY	Remarks
1	TE75P527	TE75P527	TE75P527	TE75P527	Body Tube	1	Spare Part
2	TE75P558	TE75P558	TE75P558	TE75P558	Sleeve	1	Spare Part
3	TE75P559	TE75P559	TE75P559	TE75P559	Spray Stem	1	Spare Part
4	TE75P592	TE75P592	TE75P562	TE75P562	Spray ball assembly (drilled)	1	Spare Part
5	TE75P563	TE75P563	TE75P563	TE75P563	Housing 2" ISO	1	Spare Part
6	TE75P544	TE75P544	TE75P544	TE75P544	Piston	1	Spare Part
7	TE75P545	TE75P545	TE75P545	TE75P545	Piston Spacer	1	Spare Part
8	TE75P561	TE75P561	TE75P561	TE75P561	Spring	1	Spare Part
9			TE75P502	TE75P502	Orientation Screw	1	Spare Part
10	TE75P587	TE75P587	TE75P587	TE75P587	Retaining Ring	1	Spare Part
11	TE75P552	TE75P552	TE75P552	TE75P552	Spring Pin	1	Spare Part
12	TE75P504	TE75P504	TE75P504	TE75P504	Magnet	1	Spare Part
13	TE75P505	TE75P505	TE75P505	TE75P505	Mounting Clamp 2" ISO	1	Spare Part
14	TE75P506	TE75P506	TE75P506	TE75P506	Body Clamp DIN 40	1	Spare Part
15							
16							
17	TE75P538	TE75P508	TE75P538	TE75P508	Home Chamber/Spigot Seal	1	Wear Part
18	TE75P539	TE75P509	TE75P539	TE75P509	Home Chamber/Stem Seal	1	Wear Part
19	TE75P550	TE75P550	TE75P550	TE75P550	Gasket-Home Chamber	1	Spare Part
20	TE75P573	TE75P573	TE75P573	TE75P573	Solid Gasket Spacer Ring	1	Spare Part
21	TE75P543	TE75P543	TE75P543	TE75P543	Stem Product Seal	1	Wear Part
22	TE75P540	TE75P574	TE75P540	TE75P574	Home Chamber/Sleeve Seal	1	Wear Part
23	TE75P541	TE75P575	TE75P541	TE75P575	Piston/Stem Seal	1	Wear Part
24	TE75P514	TE75P514	TE75P514	TE75P514	Piston Slide Ring	1	Wear Part
25	TE75P586	TE75P586	TE75P586	TE75P586	Piston Seal	1	Wear Part
26	TE75P516	TE75P546	TE75P516	TE75P546	Energising O-Ring	1	Wear Part
27	TE75P511	TE75P511	TE75P511	TE75P511	O-Ring	2	Wear Part
28	TE75P555	TE75P555	TE75P555	TE75P555	Ball Securing Pin	1	Spare Part

Parts Lists and Drawings (continued)

List of parts for SSB Retractor 60 Media-Spring, Hastelloy

Model No.	**TE75Q030-04**	**TE75Q050-04**			
Pos.no.	Ref. No.	Ref. No.	Description	QTY	Remarks
1	TE75P527	TE75P527	Body Tube	1	Spare Part
2	TE75P558	TE75P558	Sleeve	1	Spare Part
3	TE75P559	TE75P559	Spray Stem	1	Spare Part
4	TE75Q592	TE75Q562	Spray ball assembly (drilled)	1	Spare Part
5	TE75Q563	TE75Q563	Housing 2" ISO	1	Spare Part
6	TE75P544	TE75P544	Piston	1	Spare Part
7	TE75P545	TE75P545	Piston Spacer	1	Spare Part
8	TE75P561	TE75P561	Spring	1	Spare Part
9		TE75P502	Orientation Screw	1	Spare Part
10	TE75P587	TE75P587	Retaining Ring	1	Spare Part
11	TE75P552	TE75P552	Spring Pin	1	Spare Part
12	TE75P504	TE75P504	Magnet	1	Spare Part
13	TE75P505	TE75P505	Mounting Clamp 2" ISO	1	Spare Part
14	TE75P506	TE75P506	Body Clamp DIN 40	1	Spare Part
15					
16					
17	TE75P508	TE75P508	Home Chamber/Spigot Seal	1	Wear Part
18	TE75P509	TE75P509	Home Chamber/Stem Seal	1	Wear Part
19	TE75P550	TE75P550	Gasket-Home Chamber Mounting Flange	1	Spare Part
20	TE75P573	TE75P573	Solid Gasket Spacer Ring	1	Spare Part
21	TE75P543	TE75P543	Stem Product Seal	1	Wear Part
22	TE75P574	TE75P574	Home Chamber/Sleeve Seal	1	Wear Part
23	TE75P575	TE75P575	Piston/Stem Seal	1	Wear Part
24	TE75P514	TE75P514	Piston Slide Ring	1	Wear Part
25	TE75P586	TE75P586	Piston Seal	1	Wear Part
26	TE75P546	TE75P546	Energising O-Ring	1	Wear Part
27	TE75P511	TE75P511	O-Ring	2	Wear Part
28	TE75P555	TE75P555	Ball Securing Pin	1	Spare Part

- Intentionally blank -

Parts Lists and Drawings (continued)

Parts drawing for SSB Retractor 120 Media-Spring

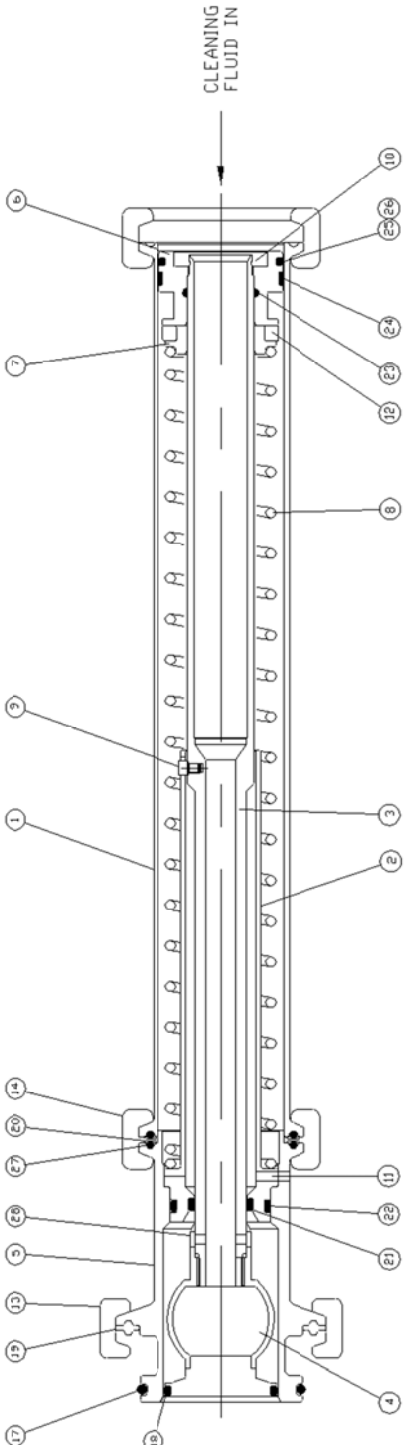

Figur 8 Components parts SSB Retractor 120 Media-Spring

Parts Lists and Drawings (continued)

List of parts for SSB Retractor 120 Media-Spring

Model No.	TE75P031	TE75P031-04	TE75P051	TE75P051-04			
Pos.no.	Ref. No.	Ref. No.	Ref. No.	Ref. No.	Description	QTY	Remarks
1	TE75P526	TE75P526	TE75P526	TE75P526	Body Tube	1	Spare Part
2	TE75P569	TE75P569	TE75P569	TE75P569	Sleeve	1	Spare Part
3	TE75P570	TE75P570	TE75P570	TE75P570	Spray Stem	1	Spare Part
4	TE75P592	TE75P592	TE75P562	TE75P562	Spray ball assembly (drilled)	1	Spare Part
5	TE75P563	TE75P563	TE75P563	TE75P563	Housing 2" ISO	1	Spare Part
6	TE75P544	TE75P544	TE75P544	TE75P544	Piston	1	Spare Part
7	TE75P545	TE75P545	TE75P545	TE75P545	Piston Spacer	1	Spare Part
8	TE75P572	TE75P572	TE75P572	TE75P572	Spring	1	Spare Part
9			TE75P502	TE75P502	Orientation Screw	1	Spare Part
10	TE75P587	TE75P587	TE75P587	TE75P587	Retaining Ring	1	Spare Part
11	TE75P552	TE75P552	TE75P552	TE75P552	Spring Pin	1	Spare Part
12	TE75P504	TE75P504	TE75P504	TE75P504	Magnet	1	Spare Part
13	TE75P505	TE75P505	TE75P505	TE75P505	Mounting Clamp 2" ISO	1	Spare Part
14	TE75P506	TE75P506	TE75P506	TE75P506	Body Clamp DIN 40	1	Spare Part
15							
16							
17	TE75P538	TE75P508	TE75P538	TE75P508	Home Chamber/Spigot Seal	1	Wear Part
18	TE75P539	TE75P509	TE75P539	TE75P509	Home Chamber/Stem Seal	1	Wear Part
19	TE75P550	TE75P550	TE75P550	TE75P550	Gasket-Home Chamber	1	Spare Part
20	TE75P573	TE75P573	TE75P573	TE75P573	Solid Gasket Spacer Ring	1	Spare Part
21	TE75P543	TE75P543	TE75P543	TE75P543	Stem Product Seal	1	Wear Part
22	TE75P540	TE75P574	TE75P540	TE75P574	Home Chamber/Sleeve Seal	1	Wear Part
23	TE75P541	TE75P575	TE75P541	TE75P575	Piston/Stem Seal	1	Wear Part
24	TE75P514	TE75P514	TE75P514	TE75P514	Piston Slide Ring	1	Wear Part
25	TE75P586	TE75P586	TE75P586	TE75P586	Piston Seal	1	Wear Part
26	TE75P516	TE75P546	TE75P516	TE75P546	Energising O-Ring	1	Wear Part
27	TE75P511	TE75P511	TE75P511	TE75P511	O-Ring	2	Wear Part
28	TE75P555	TE75P555	TE75P555	TE75P555	Ball Securing Pin	1	Spare Part

Parts Lists and Drawings (continued)

List of parts for SSB Retractor 120 Media-Spring, Hastelloy

Model No.	**TE75Q031-04**	**TE75Q051-04**			
Pos.no.	Ref. No.	Ref. No.	Description	QTY	Remarks
1	TE75P526	TE75P526	Body Tube	1	Spare Part
2	TE75P569	TE75P569	Sleeve	1	Spare Part
3	TE75P570	TE75P570	Spray Stem	1	Spare Part
4	TE75Q592	TE75Q562	Spray ball assembly (drilled)	1	Spare Part
5	TE75Q563	TE75Q563	Housing 2" ISO	1	Spare Part
6	TE75P544	TE75P544	Piston	1	Spare Part
7	TE75P545	TE75P545	Piston Spacer	1	Spare Part
8	TE75P572	TE75P572	Spring	1	Spare Part
9		TE75P502	Orientation Screw	1	Spare Part
10	TE75P587	TE75P587	Retaining Ring	1	Spare Part
11	TE75P552	TE75P552	Spring Pin	1	Spare Part
12	TE75P504	TE75P504	Magnet	1	Spare Part
13	TE75P505	TE75P505	Mounting Clamp 2" ISO	1	Spare Part
14	TE75P506	TE75P506	Body Clamp DIN 40	1	Spare Part
15					
16					
17	TE75P508	TE75P508	Home Chamber/Spigot Seal	1	Wear Part
18	TE75P509	TE75P509	Home Chamber/Stem Seal	1	Wear Part
19	TE75P550	TE75P550	Gasket-Home Chamber Mounting Flange	1	Spare Part
20	TE75P573	TE75P573	Solid Gasket Spacer Ring	1	Spare Part
21	TE75P543	TE75P543	Stem Product Seal	1	Wear Part
22	TE75P574	TE75P574	Home Chamber/Sleeve Seal	1	Wear Part
23	TE75P575	TE75P575	Piston/Stem Seal	1	Wear Part
24	TE75P514	TE75P514	Piston Slide Ring	1	Wear Part
25	TE75P586	TE75P586	Piston Seal	1	Wear Part
26	TE75P546	TE75P546	Energising O-Ring	1	Wear Part
27	TE75P511	TE75P511	O-Ring	2	Wear Part
28	TE75P555	TE75P555	Ball Securing Pin	1	Spare Part

Maintenance

The units are designed to be self cleaning and should require very little or no maintenance between service intervals.

Performance will be effected by contamination from debris or particles where the CIP system is inadequately filtered or swarf in the system after installation.

Deterioration of the seals will also affect the unit's performance.

It is for this reason that it is recommended that the units are inspected every 500 working hours. After 2000 working hours inspect every 200 working hours.

A spares seal kit is available and does require simple tooling to fit the seals. The part No. for the seal kit is listed in the Spare Parts sections of this Manual on pages 29 and 30.

Dismantling the Unit for Inspection

1. Always release the CIP media connection to the unit.
2. Remove the unit from its mounting so that the work can be carried out in the workshop. To remove the unit release the 2" ISO clamp which retains it to the 2" ISO mounting ferrule (it is the largest clamp on the unit). Carefully draw the unit from the ferrule ensuring that you retain the white PTFE gasket between the mounting ferrule and the head of the unit.
3. Slacken and remove the DIN 40 clamp which secures the main body tube to the Home Chamber. Carefully withdraw the Body Tube. See Figure 9 below.

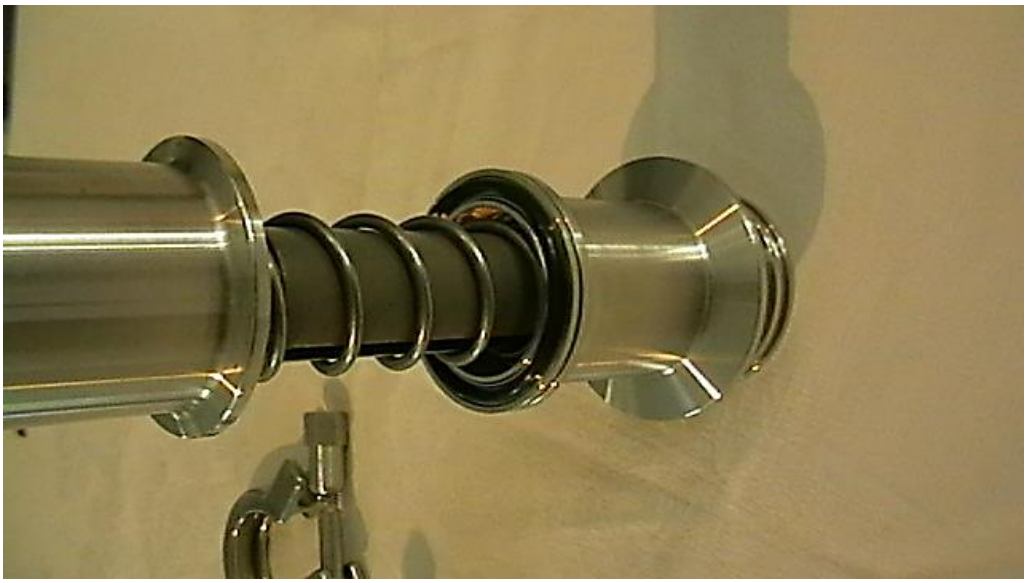

Figure 9 Dismantling

Maintenance (continued)

4. There is a Solid Gasket Spacer Ring & two O-rings between the Home Chamber & the Body Tube.

   The Solid Gasket Spacer Ring (TE75P573) should be retained for re-assembly but the two

   O-rings (TE75P511) should be replaced. See Figure 10 below.

Figure 10

5. Once the Body Tube is removed the Piston Slide ring will fall away from the Piston. This is normal. See Figure 11.

Figure 11

Maintenance (continued)

6. **CAUTION:** To remove the Piston the Retaining Ring inside the recess of the Piston has to be removed. The Spring is under compression at this stage so the Piston must be held downwards as the Retaining Ring is removed to avoid the Piston being ejected by the spring. See Figure 12. When rebuilding the Unit a new Retaining Ring must be used.

Figure 12

7. The remaining seal visible on the Piston in Figure 13 is the Main Air Seal. This seal is a PTFE ring with an O-Ring underneath to energise the seal.

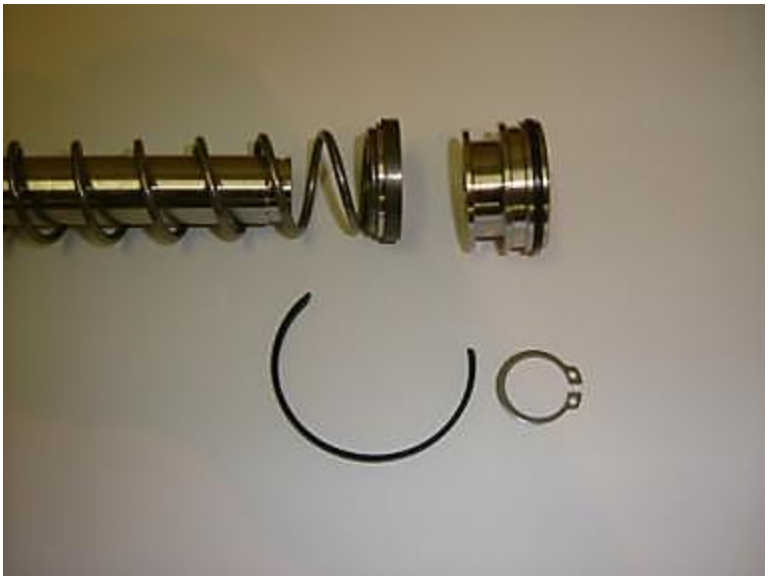

Figure 13

Maintenance (continued)

8. Look inside the piston, there is an O-Ring which seals the piston to the spray stem. This seal should be carefully removed using a small sharp pointer pressed into the O-Ring. The O-Ring must be discarded. See Figure 14

Figure 14

9. Remove the spring from the remaining body of the SSB Retractor.

Maintenance (continued)

10. Remove the Orientation Screw (if fitted) from the Spray Stem as shown in Figure 15 using a 2.5mm Allen key. Retain the screw as it will be required in the re-build.

    The Orientation Screw is fitted to ensure the orientation of the spray pattern. If the unit is fitted with a general coverage spray pattern the Orientation Screw may not be fitted.

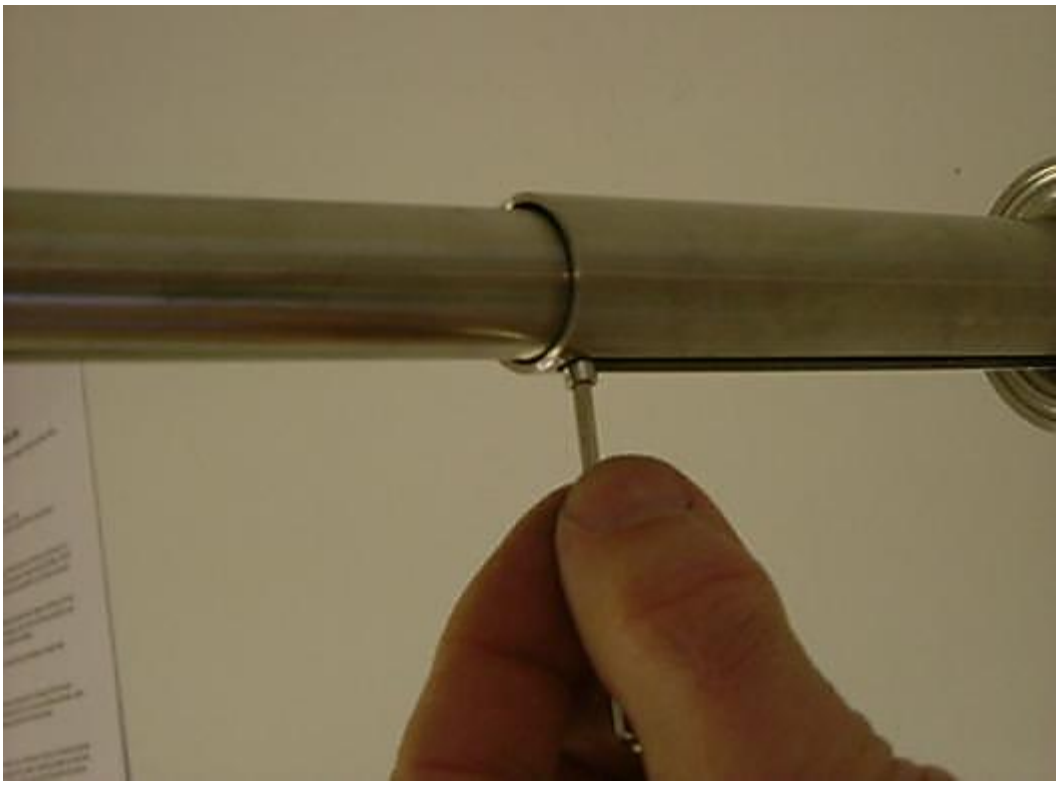

Figure 15

Maintenance (continued)

11. Once the orientation screw is removed, push the spray stem forward to reveal the spray ball. The Sprayball is retained by a 2mm diameter pin which passes through the neck. Straighten the end of the pin with a pair of pliers. See Figure 16.

Figure 16

12. Once the Pin is removed the Sprayball can be unscrewed (anti clockwise) & removed. The Securing Pin must be discarded. See Figure 17.

Figure 17

Maintenance (continued)

13. The spray stem can now be drawn out of the main housing. See Figure 18.

Figure 18

14. To remove the sleeve from the main housing the 3mm dia. roll pin should be driven into the housing using a 2.5mm pin punch. (When rebuilding, a new pin must be used.) See Figure 19.

Figure 19

Maintenance (continued)

15. Remove the Sleeve from the main housing to reveal the O-Ring seal. This seal should be carefully removed with a small pair of long nosed pliers & discarded. See Figure 20.

Figure 20

16. The product seal can be seen in the large end of the sleeve. This Seal should be carefully removed using a pair of long nosed pliers & discarded.

Figure 21

Re-Build & fitment of New Service Repair Kit

The Service Repair Kit for the SSB Retractor unit is-

-TE75P285-90 for standard EPDM seals. For units TE75P030, TE75P031, TE75P050 & TE75P051

-TE75P285-94 for Perfuorolastomer seals. For units TE75P030-04, TE75P031-04, TE75P050-04, TE75P051-04, TE75Q030-04, TE75Q031-04, TE75Q050-04 & TE75Q051-04

1. Fitting of Stem Product Seal Part No. TE75P543

Place the Stem Product Seal in the end of the Sleeve. Position the seal so that one side of the seal enters the seal groove. Carefully work around the seal, pushing it into the groove. Care must be taken not to kink the seal. See Figure 22.

Figure 22

2. Fitting of Home Chamber/Sleeve Seal. Part No. TE75P540

Start one side of the O-ring in the O-ring Groove & gently stretch the O-ring into position. See Figure 23.

Figure 23

Energising O-ring

Re-Build & fitment of New Service Repair Kit (continued)

3. Fitting the Sleeve into the Home Chamber.

   Lightly wet the O-ring on the Sleeve with clean water & offer up to the Home Chamber. Rotate the Sleeve until the 3mm Spring Pin hole aligns with the hole on the Home Chamber.

   Push the Sleeve into the Home Chamber & check that the Spring Pin holes align.

   Place the Home Chamber on a piece of wood & tap the Spring Pin Part No. TE75P552 fully in using a pin punch.

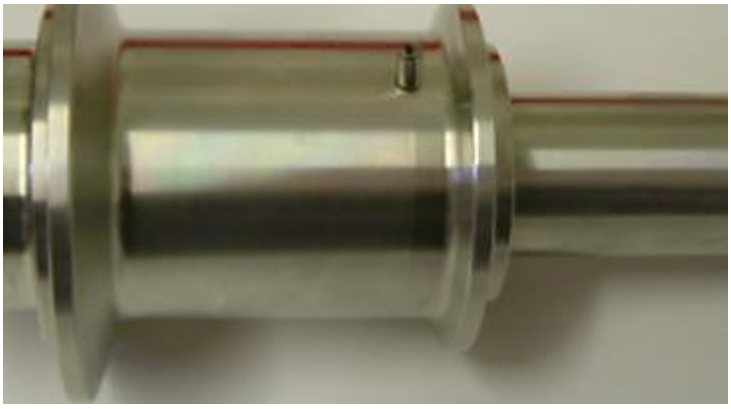

Figure 24

4. Fitting the Spray Stem.

   Take the Spray Stem & ensure it is clean. Check down the 16mm bore to ensure that there is no scratching or scoring.

   Carefully place the smaller threaded end of the stem through the Product Seal in the Home Chamber. Once aligned, gently tap the end of the stem with the palm of a hand to push the stem through the seal. See Figure 25.

Figure 25

Re-Build & fitment of New Service Repair Kit (continued)

5. Fitting the Spray ball to the Spray Stem.

   Ensuring it is clean, gently screw the Spray Ball all the way onto the Spray Stem. Slowly back off the ball on the thread until the small slot in the neck of the ball aligns with the hole in the Spray Stem.

   Pass the Ball Securing Pin part No. TE75P555 through the neck of the ball & bend the end with a pair of pliers approximately 10° to prevent it falling out. See Figure 26.

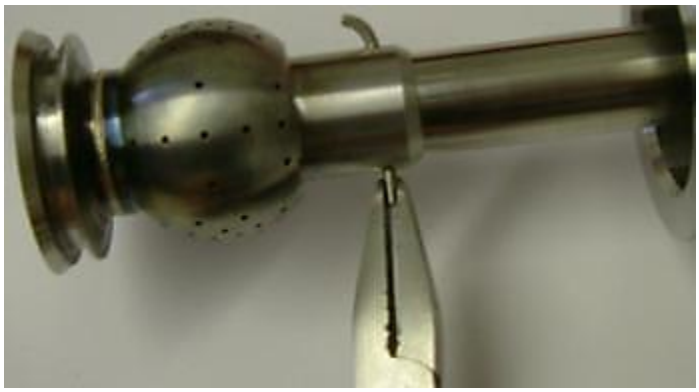

Figure 26

6. Fitting the Home Chamber/Stem Seal part No. TE75P538 or TE75P508.

   Place the Home Chamber/Stem Seal part No. TE75P538 or TE75P508 into the O-ring groove in the cap of the Spray Ball. See Figure 27.

Figure 27

Re-Build & fitment of New Service Repair Kit (continued)

7. Fitting the Spring.

   Push the Spray Stem up so that the Spray Ball enters the Home Chamber.

   If the Orientation Screw is required (if a targeted spray pattern is being used) rotate the Spray Stem until the M3 thread is visible through the guide slot in the Sleeve & screw in the Orientation Screw. Nip it up tight but take care not to over tighten as it is a fine thread.

   See Figure 28.

Figure 28

8. Pass the Spring over the Spray Stem & Sleeve & ensure that the Spring is seated at the base of the sleeve. See Figure 29.

Figure 29

Re-Build & fitment of New Service Repair Kit (continued)

9. Fitting the Piston/Stem Seal Part No. TE75P541 or TE75P575.

   Fit the Piston/Stem Seal into the Internal O-ring groove inside the bore of the Piston.

   See Figure 30.

Figure 30

10. Fitting Piston Seal & Energising O-ring Parts TE75P586 & TE75P516 or TE75P546.

    Put one side of the O-ring (TE75P516 or TE75P546) into the O-ring groove of the Piston & carefully stretch the O-ring into the groove.

    Place one side of the Piston Media Seal Part TE75P586 into the groove on top of the Energising O-ring & carefully run the seal around the Piston so that it drops into the groove.

    See Figure 31.

Figure 31

Re-Build & fitment of New Service Repair Kit (continued)

11. Fitting the Piston.

Stand the Retract-A-Ball assembly on the face of the Home Chamber so that the Spring points upwards. Place the Piston Spacer onto the Spring as shown. Place the Ring Magnet onto the Spring Spacer if required. The Magnet will only be required if Proximity Sensors are to be used to indicate open & closed positions. See Figure 32.

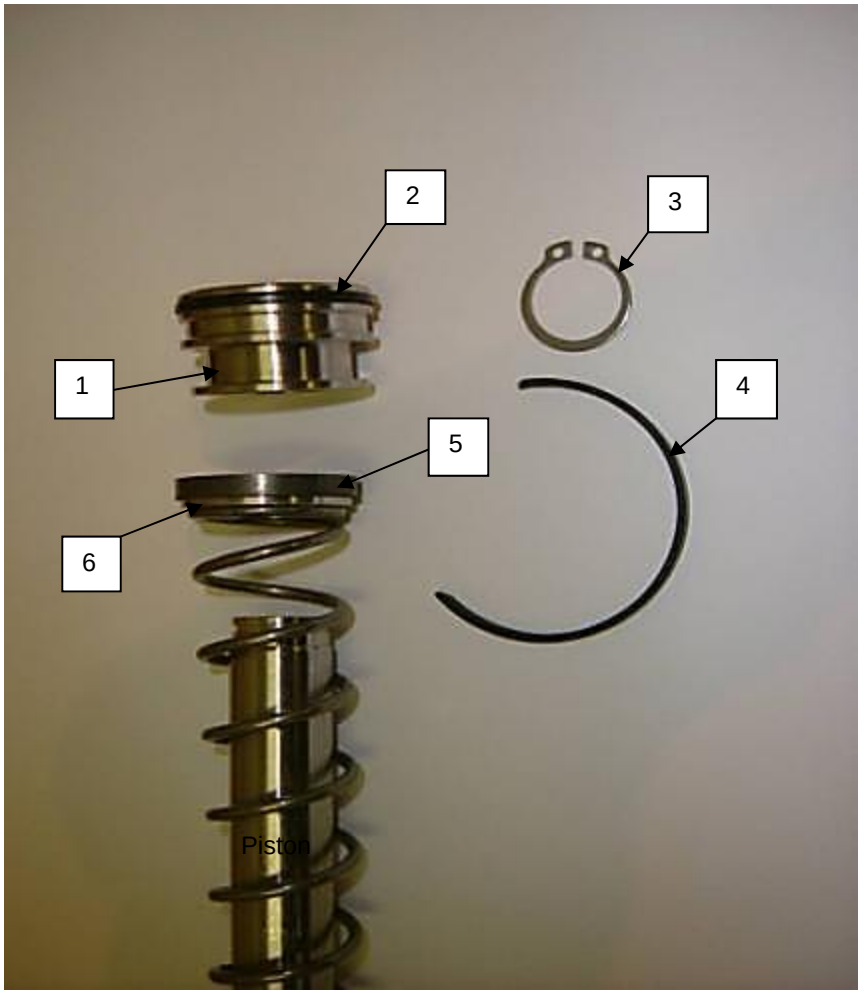

1. Piston.
2. Piston Media Seal
3. Retaining ring.
4. Piston Slide Ring.
5. Ring Magnet.
6. Piston Spacer.

Figure 32

Re-Build & fitment of New Service Repair Kit (continued)

12. Place the Piston onto the Piston Spacer & push downwards, compressing the Spring so that the Spray Stem enters the Piston. Push down until the Piston is fully seated.

Warning: DO NOT LET GO OF THE PISTON AS THE SPRING IS UNDER COMPRESSION.

Fit a new Retaining Ring Part No. TE75P587 to retain the Piston. See Figure 33.

Figure 33

13. Fitting the Main Body Tube.

While the Unit is still stood vertically, place one of the O-ring Seals (TE75P511) over the Spring & lower into position on the Home Chamber Flange. Follow this with the Solid Gasket Spacer Ring followed by the second O-ring seal (TE75P511). See Figure 34Figure 33.

Figure 34

Re-Build & fitment of New Service Repair Kit (continued)

14. Ensure the Body Tube is clean & check the internal bore for scratches as this bore forms the air seal with the Piston.

    Carefully lower the Body Tube over the Piston & Media Seal, take great care not to damage the Media Seal. Stop once the Seal has just entered the Body Tube & the groove for the Piston Slide Ring is still visible.

    Wrap the Piston Slide Ring, part TE75P514 around the Piston groove & carefully lower the Body Tube until it meets the Solid Gasket Spacer ring on the Home Chamber.

    Fit the DIN 40 Body Clamp to retain the two parts. See Figure 35.

Figure 35

15. Fitting the Home Chamber Spigot Seal Part No. TE75P538 (EPDM) or TE75P508 (FFKM) Carefully fit the O-ring in the O-ring groove at the front of the Home Chamber.

    See Figure 36.

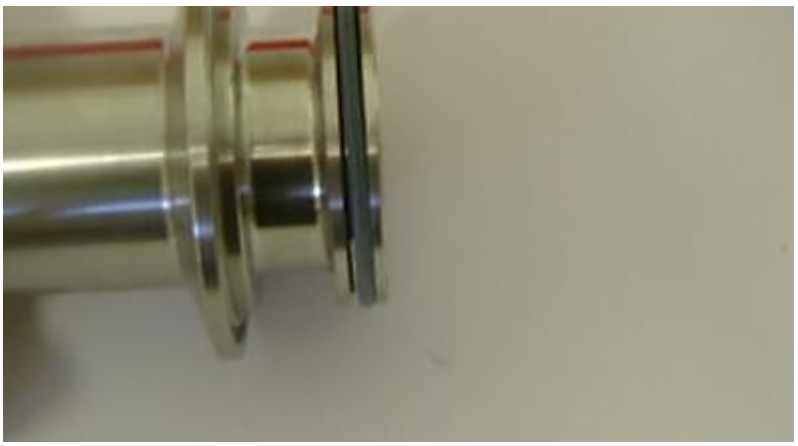

Figure 36

Standard Service Kits

Part Number TE75P285-90 For Units TE75P030, TE75P031, TE75P050 & TE75P051

The Standard Service Kit comprises of a full set of replacement seals, a new Retaining Ring and new roll pin. All the parts necessary to carry out a service or repair to the seals are included.
The Standard Service Kit seal materials are EPDM and carbon filled PTFE.

Standard Service Kit for Units TE75P030, TE75P031, TE75P050 & TE75P051 Part No. TE75P285-90		
Part No.	**Description**	**Qty.**
TE75P587	External Circlip	1
TE75P552	Spring Pin	1
TE75P538	Home Chamber/Spigot Seal (EPDM)	1
TE75P539	Home Chamber/Stem Seal (EPDM)	1
TE75P550	Gasket-Home Chamber	1
TE75P543	Stem Product Seal	1
TE75P540	Home Chamber/Sleeve Seal (EPDM)	1
TE75P541	Piston/Stem Seal (EPDM)	1
TE75P514	Piston Slide Ring	1
TE75P586	Piston Seal	1
TE75P516	Energising O-Ring (EPDM)	1
TE75P511	O-Ring (EPDM)	2
TE75P555	Ball Securing Pin	1

Standard Service Kits

Part Number TE75P285-94 For Units TE75P030-04, TE75P031-04, TE75P050-04, TE75P051-04, TE75Q030-04, TE75Q031-04, TE75Q050-04 & TE75Q051-04

However, if the unit was fitted with our 'Special Trim' seals required due to aggressive product or cleaning media, the service kit required is part number TE75P285-94.
The seal materials are FFKM (Perfluoroclastomer) and carbon filled PTFE.

Standard Service Kit for Units TE75P030-04, TE75P031-04, TE75P050-04 & TE75P051-04 TE75Q030-04, TE75Q031-04, TE75Q050-04 & TE75Q051-04 "Special Trim" Part No. TE75P285-94		
Part No.	**Description**	**Qty.**
TE75P587	External Circlip	1
TE75P552	Spring Pin	1
TE75P508	Home Chamber/Spigot Seal (FFKM)	1
TE75P509	Home Chamber/Stem Seal (FFKM)	1
TE75P550	Gasket-Home Chamber	1
TE75P543	Stem Product Seal	1
TE75P574	Home Chamber/Sleeve Seal (FFKM)	1
TE75P575	Piston/Stem Seal (FFKM)	1
TE75P514	Piston Slide Ring	1
TE75P586	Piston Seal	1
TE75P546	Energising O-Ring (FFKM)	1
TE75P511	O-Ring (EPDM)	2
TE75P555	Ball Securing Pin	1

General Information

How to Order Spare Parts

On the Cross Sectional Drawings as well as on all instruction drawings, the individual parts have a pos. no., which is the same on all drawings. From the pos. no. the part is easily identified in the Reference List of Parts, pages 29 and 30.

Individual parts should always be ordered from the Reference Lists of Parts, pages 29 and 30. Ref. no. and description should be clearly stated.

Please also quote the type of machine and serial no. This will help us to help you. The type and serial nos. are stamped on the Body of the tank cleaning machine.

Service and Repair

Upon every return of a product, no matter if for modifications or repair, it is necessary to contact your local Alfa Laval office to guarantee a quick execution of your request.

You will receive instructions regarding the return procedure from your local Alfa Laval office. Be sure to follow the instructions closely.

How to contact Alfa Laval Tank Equipment

For further information please feel free to contact:

Alfa Laval Tank Equipment

Alfa Laval Kolding A/S

31, Albuen - DK 6000 Kolding - Denmark

Registration number: 30938011

Tel switchboard: +45 79 32 22 00 - Fax switchboard: +45 79 32 25 80

www.toftejorg.com , www.alfalaval.dk - info.dk@alfalaval.com

Contact details for all countries are continually updated on our websites.

EC/EU Declaration of Conformity

EC Declaration of Conformity

The designated company

Alfa Laval Kolding A/S
Company name

Albuen 31, 6000 Kolding, Denmark
Address

+45 79 32 22 00
Phone no.

hereby declare that

Tank Cleaning Machine	SSB Retractor Stroke 60/120 Media-to-Spring
Designation	Type

From serial numbers from 2015-00001 to 2030-99999

is in conformity with the following regulations and directives with amendments:

- **FDA 21CFR§177**
- **The Machinery Directive 2006/42/EC**
  DS/EN ISO 12100:2010
- **The Pressure Directive 97/23/EC**
  According to its own volume and the rated pressure range the product is regarded an Article 3, paragraph 3 Equipment
- **The Equipment Explosive Atmospheres (ATEX) Directive 94/9/EC, valid until 2016-04-19**
- **The Equipment Explosive Atmospheres (ATEX) Directive 2014/34/EU, valid from 2016-04-20**
  (Applicable for machine certified as category 1 and 2 component, see machine engraving)
  DS/EN 13463-1:2009, DS/EN 13463-5:2011,
  DS/EN ISO/IEC 80079-34:2011, Annex A, paragraph A.5.3 Rotating mechines

EC Type Examination Certificate no. Baseefa 06ATEX0292X

Marking: Ex *II 1GD c TX°C Tamb -10°C to +140°C*
Ex *II 1GD c TX°C Tamb -10°C to +180°C*

Note: (T)ambient rating: -10°C to +140°C when fitted with EPDM seals
-10°C to +180°C when fitted with Perfluorolastomer seals.

Baseefa Ltd., Certification body number 1180, Rockhead Business Park
Staden Lane, Buxton, Derbyshire SK17 9RZ, United Kingdom

The person authorised to compile the technical file is the signer of this document.

QHSE Manager, Quality, Health and Safety & Environment	Annie Dahl	
Title	Name	Signature
ATEX Responsible Engineer	Denniz Høxbroe	
Title	Name	Signature
November 12, 2015	Kolding	
Date	Place	

This Declaration of Conformity replaces Declaration of Conformity dated 2012-01-16

ATEX-Special Conditions for safe use

ATEX CERTIFICATION

Ⓔx II 1GD c TX°C Tamb -10°C to +140°C
Ⓔx II 1GD c TX°C Tamb -10°C to +180°C

BASEEFA CUSTOMER REFERENCE No. 5322
PROJECT FILE No. 11/0682

Special Condition for Safe Use

1. The Unit shall be connected to a fully earthed pipeline/duct or tank/vessel.
2. The pipeline/duct shall not exceed a diameter of 3m, and the tank/vessel shall not exceed 100m³.
3. The air operated unit shall only be operated with inert gas or clean air.
4. The unit shall only be purge using inert gas or clean air.
5. Do not allow the unit to be operated when process media is in the pipeline or tank.
6. Do not allow the air pressure to exceed 5.5 Bar.
7. Do not allow the cleaning media to exceed 4 Bar.
8. When an external sensor is fitted to indicate the open or closed position it shall be suitable for the zone of use.

This product fully complies to ATEX category 1 as long as the 8 special conditions above are adhered to.
Please read the above conditions prior to installation & ensure that all conditions are met.

Explanation of T (temperature) rating.
The ATEX classification

Ⓔx II 1GD c TX°C Tamb -10°C to +140°C when fitted with EPDM seals
Ⓔx II 1GD c TX°C Tamb -10°C to +180°C when fitted with Perfluorolastomer seals

Shows the temperature rating as T(Variable).
This is because the SSB Retractor max temperature that it will reach will be dependent upon the temperature of the production process or the temperature of the CIP media which passes through it.

How to contact Alfa Laval
Contact details for all countries are
continually updated on our website.
Please visit www.alfalaval.com to access the information directly.

© Alfa Laval Corporate AB
This document and its contents is owned by Alfa Laval Corporate AB and protected by laws governing intellectual property and thereto related rights. It is the responsibility of the user of this document to comply with all applicable intellectual property laws. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the expressed permission of Alfa Laval Corporate AB. Alfa Laval Corporate AB will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.